
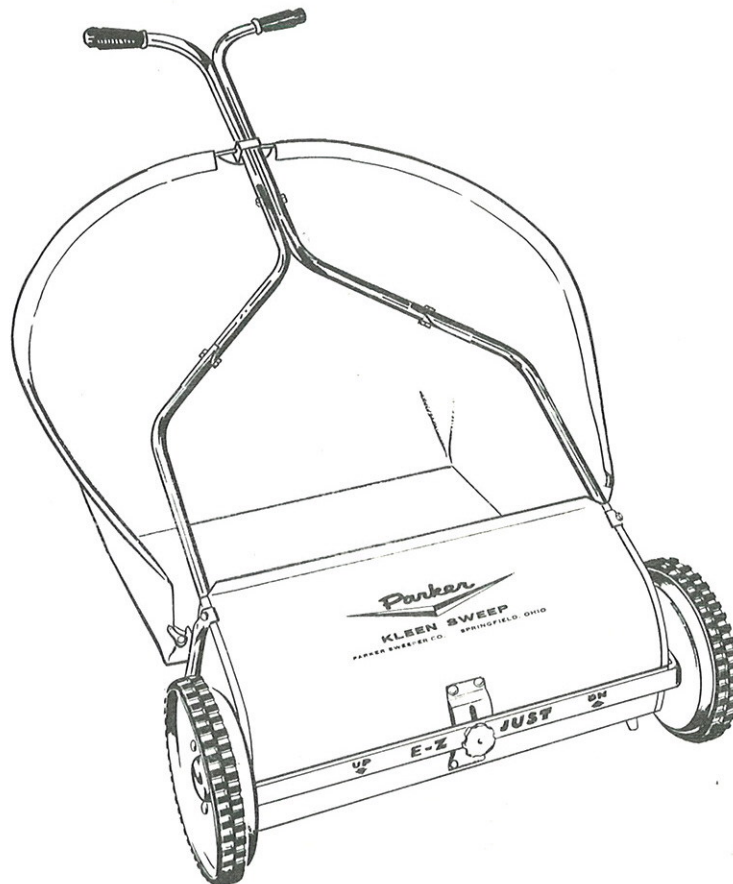


OPERATING INSTRUCTIONS AND PARTS FOR
FOR
TK-6525-A KLEEN SWEEP

Parker

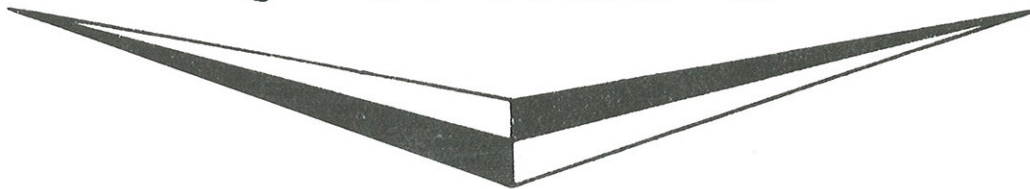

NOTICE: These instructions were written to assist you in assembling your Lawn Sweeper quickly and correctly. Read instructions thoroughly before attempting assembly so that you are familiar with the complete procedure.

PARKER SWEEPER COMPANY

BOX 720

Printed in U.S.A.

7-68

SPRINGFIELD, OHIO

ASSEMBLY INSTRUCTIONS

1. Place sweeper on ground in upright position.
2. Remove bolts from corner of hood and position R.H. handle UNDER R.H. corner of hood. Replace hardware as it was before.
3. Repeat instruction No. 2 for L.H. handle.
4. Remove bolts from lower end of upper handle assembly.

Assemble handle assembly to lower handles with bolts and nuts you just removed, make sure that basket hanger points down.

5. Assemble basket by spreading the two upper basket rods so that the L.H. rod will telescope into the connector of R.H. rod at top center of basket.
6. Place basket into position as shown on front cover.

OPERATING INSTRUCTIONS

Brush Height Adjustment. Loosen adjusting knob, Ref. No. 28. To raise brushes to extreme height, push down on frame assembly, Ref. No. 15, as far as possible. To lower brushes to lowest position, lift up on frame assembly as far as possible. Secure knob when desired adjustment is obtained. When adjusting brushes, the hood assembly will automatically be set in the correct position.

1. For grass clippings or leaves, adjust brushes to highest position. After trial run on lawn, should the setting be too high, lower slightly and try again until correct setting is found. Brush life may be prolonged by adjusting so contact with ground is light. The lighter the contact, the longer the wear and easier to push.
2. For patio, sidewalk, and driveway sweeping, adjust brushes so they just contact ground.

NOTE: IF SWEEPER PUSHES HARD, THE HOOD IS SET TOO LOW.

Maintenance. Lubricate the sweeper about once each season to insure long unit life and easy operation.

1. Oil the wheel gear and pinion through oil hole on each side of wheel hub.

2. It is not necessary to oil nylon brush bearings.

Canvas Basket Care. The basket should always be emptied immediately of wet clippings or leaves. Not doing so will cause it to mildew. Always store the sweeper in a dry place.

Care and Replacement of Brushes. The brushes used on this sweeper are made of the finest bristles that will give years of service if given proper care. Should they become bent from constant use, dampening and straightening will reset the bristles upright. It is also possible to straighten bristles by reversing the brushes on reel shaft.

To Reverse or Replace Brushes:

1. Turn the sweeper upside down on the ground.
2. Remove the bolts which hold the brush sections to the reel shaft. Reverse and replace the brushes and retighten the bolts.

Storage. Hang sweeper on the wall by the upper handle for storage.

ALWAYS GIVE THE FOLLOWING INFORMATION WHEN ORDERING REPAIR PARTS:

1. PART NUMBER (Not Ref. No.)
2. QUANTITY NEEDED
3. DESCRIPTION OF PART
4. SERIAL No. (Found on Guarantee Card)
5. MODEL No. TK-6525-A

If unable to obtain parts locally, write down above information and send to:
PARKER SWEEPER CO., BOX 720, SPRINGFIELD, OHIO 45501

Your unit is right hand (R.H.) or left hand (L.H.) as you stand behind it.

IMPORTANT

PARTS LIST

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	64-152-A	2	Grip - Handle	26	70-516-12	1	Bolt - Carriage 5/16-18 x 3/4
2	68-223-C	2	Handle - Upper	27	936-716	1	Washer - Int. Tooth Lock 7/16
3	64-160-B	1	Hanger - Upper Basket	28	59-47-B	1	Knob - Adjusting
4	52-141-B	2	Brush - Strip	29	45-25-A	2	Pawl
5	365-416	4	Nut - Hex Lock 1/4-20	30	56-18-RC	1	Pinion R. H. (Shown)
6	64-150-C	1	Basket		56-19-LC	1	Pinion L. H. (Not Shown)
7	355-1-416	2	Nut - Stamped Square 1/4-20	31	59-54-A	6	Screw - Truss Head Phillips
8	68-225-LC	1	Handle - Lower L. H.	32	59-26-B	2	Gear - Wheel
9	355-416	8	Nut - Square 1/4-20	33	59-20-C	4	Rim - Wheel
10	65-416-8	2	Bolt - Hex Head 1/4-20 x 1 1/2	34	380-332-16	2	Pin - Cotter 3/32 x 1 <i>380-422-16</i>
11	65-416-24	4	Bolt - Hex Head 1/4-20 x 1 1/2	35	59-46-A	2	Cap - Hub
12	63-255-D	1	Support - Handle	36	64-161-RA	1	Hanger - Lower Basket R.H.
13	52-140-B	1	Shaft - Reel	37	65-416-16	6	Bolt - Hex Head 1/4-20 x 1
14	64-140-B	1	Hood	38	62-112-B	2	Rollers - Complete
15	59-43-D	1	Frame	39	65-416-32	4	Bolt - Hex Head 1/4-20 x 2
16	946-1216-20	4	Washer - Fiber 3/4 I.D. x 1 1/4 O.D.	40	64-156-B	1	Rod - Lower Basket
17	59-44-C	2	Wheel - Complete	41	64-155-LF	1	Rod - Upper Basket L. H.
18	63-224-B	2	Tire	42	62-75-A	2	Roller - Wood
19	335-516	2	Nut - Hex 5/16-18	43	62-77-B	2	Bracket - Roller
20	945-516	2	Washer - Flat S. A. E. 5/16	44	62-76-A	2	Spacer
21	59-29-A	2	Spacer	45	64-153-B	1	Rod - Upper Assy. R. H.
22	59-55-A	2	Screw - Truss Head	46	68-224-RC	1	Handle - Lower R. H.
23	55-161-A	2	Washer - Special	47	364-416	8	Nut - Hex Lock 1/4-20 thin
24	60-12-A	2	Bearing - Nylon	48	65-416-36	1	Bolt - Hex Head 1/4-20 x 2 1/4
25	64-162-LA	1	Hanger - Lower Basket L. H.				

